
HOW DO YOU PLUMB A FUEL CELL?

RECOMMENDED BY RACEWOR

RACEWORKS

PASSION FOR PERFORMANCE

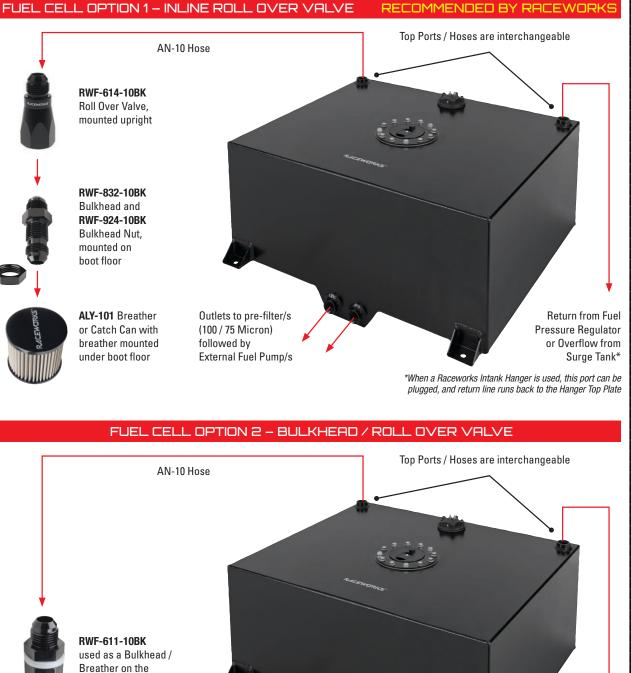

Outlets to pre-filter/s (100 / 75 Micron) followed by External Fuel Pump/s

boot floor

Return from Fuel Pressure Regulator or Overflow from Surge Tank*

*When a Raceworks Intank Hanger is used, this port can be plugged, and return line runs back to the Hanger Top Plate

raceworks.com.au

RACEWORKS PASSION FOR PERFORMAN