

PTFE HOSE INSTALLATION TOOL RWT-016BK

RACEWORKS™
PASSION FOR PERFORMANCE

RWT-016 CRIMP TOOL INSTRUCTIONS


1. Identify which end of the stainless insert is needed for the hose you are working with.



2. Fit the stainless insert into the Black aluminium holder with the correct end protruding, for this example we are working with an AN-8 hose.




3. Cut your AN hose using your hose cutters.

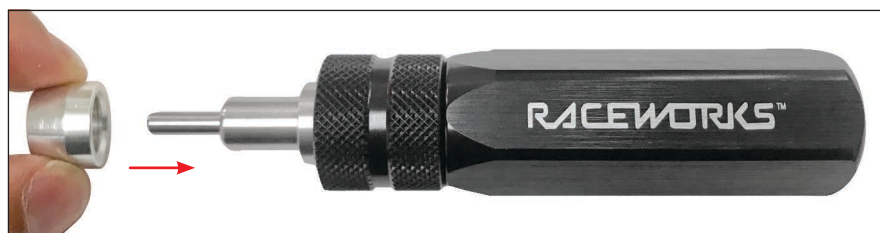

4. Fit your olive onto your Raceworks installation tool.



5. Insert the installation tool into the PTFE liner and push the olive in until seated.

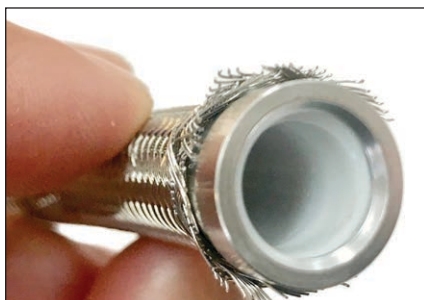

RACEWORKS™
PASSION FOR PERFORMANCE

raceworks.com.au

**GET
REAL!**

GetRealAutoParts.com.au