


OIL RESTRICTOR FITTING

RWF-399

RACEWORKS™
PASSION FOR PERFORMANCE

STEP 1

AN Hose End

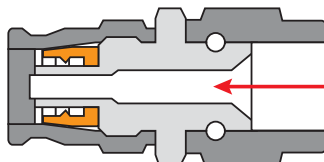


Disconnect your hose end from the AN Male Flare Adapter.

STEP 2

AN Male Flare


Restrictor

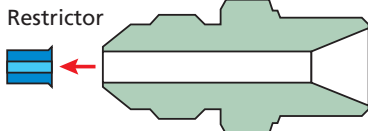

Insert the Restrictor into the hose end until it seats.

STEP 3

Assembled

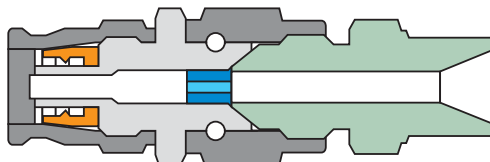

Re-attach hose end to AN Male Flare Adapter, taking care that the Restrictor does not fall out.